

C3 Daily Maintenance

The **Daily Cleaning Recommendation** below will help in maintaining your C3 oven. Be sure to use only TurboChef approved chemicals. The use of any other cleaning products can damage critical parts and may void warranty on those parts.

Supplies & Equipment

Required: TurboChef® Oven Cleaner & Guard, green scrub pads, protective eyewear and protective rubber gloves. **Suggested:** Paper towels, firm bristle brush, spray bottle for rinse water. **Optional:** Mask.



STEP 1: Prepare the Oven.

- Place oven in OFF MODE.
- Open oven door.
- Allow oven to COOL until “Cooling Down” message clears from display before cleaning (approx. 90 mins).



STEP 2: Remove the ceramic cooking platter. Spray ceramic cooking platter with TurboChef® Oven Cleaner.

- Leave the Wave Guide Cap in place.
- After spraying ceramic cooking platter, set aside to allow the cleaner to penetrate.
- DO NOT soak ceramic cooking platter in water.



STEP 3: Spray TurboChef® Oven Cleaner in oven cavity.

- Spray TurboChef® Oven Cleaner in the cavity. Allow cleaner to penetrate for approximately 10 minutes.



STEP 4: Clean the ceramic cooking platter.

- Use a firm bristle brush and green scrub pads.
- Rinse platter thoroughly after cleaning.
- DO NOT soak or run through a dishwasher.



STEP 5: Clean the filter.

- Grasp the front edge, (the frame) and wiggle the filter forward.
- Notice the orientation of the screen as you remove it, as re-installing it upside down will destroy it.
- DO NOT use a sharp object to remove the filter.
- Spray both sides with TurboChef oven cleaner and rinse thoroughly with hot water.
- DO NOT soak or run through a dishwasher.



STEP 6: Clean interior of oven.

- Using a green scrub pad, thoroughly scrub the inside of the oven starting with the door, followed by the front ledge, side and back walls and ceiling of cook chamber. Scrub floor last.
- Wipe out sudsy residue with a paper towel as you proceed.
- Rinse thoroughly using a spray bottle of clean water. Dry with a paper towel.



STEP 7: Clean the ceramic Wave Guide Cap.

- Remove Wave Guide Cap.
- In a sink area, clean Wave Guide Cap using brushes and green scrub pads.
- Dry and replace in oven.




STEP 8: Clean the grease collection pan.

- Close oven door and remove the lower panel.
- Remove and empty the grease collection pan.
- Clean grease collection pan and lower pan using hot, soapy water.
- Dry and replace.



STEP 9: Apply TurboChef® Oven Guard to oven interior.

- Applied to a clean cold oven, prior to turning oven on, the Oven Guard dries to a protective film as the oven warms.
- Make certain the Wave Guide Cap is in place.
 - Using a fine mist, spray a thin coating of Oven Guard on all interior surfaces.
 - Spray across the top of the oven followed by the back wall, side walls and bottom (including cap). Finish with the inside of the door.
 - Install the clean, dry cooking platter. Shut the oven door and press the OVEN ON button. There may be some odor from the Oven Guard as it dries.
 - DO NOT spray Oven Guard on the cooking platter.

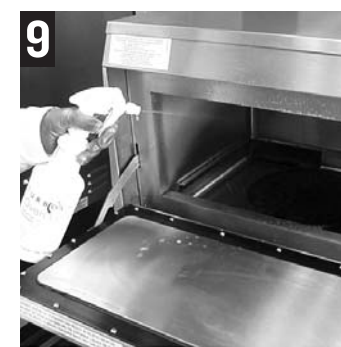

DO:

- Ensure the oven is cleaned daily.
- Use only specified C3 oven utensils.
- Ensure products to be cooked from a chilled state are thoroughly defrosted.
- Ensure products to be cooked frozen are cooked straight from the freezer.
- Ensure all products cooked match their cooking profile.
- Use care when handling beverages heated with microwaves as eruptive boiling can occur.
- Remove items from oven as soon as they are cooked.
- Use only microwave-safe utensils.
- Cool down the oven at the end of your daily operation cycle.

DO NOT:

- Lift oven by handle.
- Slam or mishandle the oven door.
- Cook greasy items directly on platter.
- Place foil or metal objects of any kind in the oven.
- Operate the oven without food in the cook chamber.
- Frequently open and close the door to check the product - especially when cooking pastry.
- Cook items wrapped in plastic or any type of cling film.
- Put products in the oven until ready to cook.
- Keep products to be cooked in an ambient temperature unless specified.
- Cook items with a fine crumb coating.
- Place bottles and jars in the oven.
- Unplug at the end of your daily operation cycle prior to cool down.

800.90TURBO



turbochef.com