



Daily Cleaning for the Encore™/Encore 2™ Oven

Daily Cleaning


Follow the steps below when cleaning your oven. Use only TurboChef®-approved cleaning chemicals. Failure to adhere to these procedures or the use of any other cleaning products may damage critical oven components, resulting in a non-warranty service call.

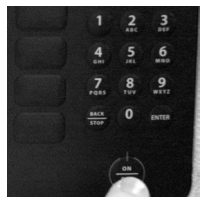

Step 1

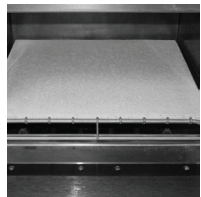

Step 2

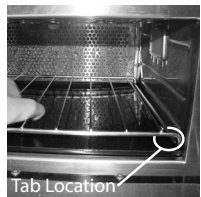


Step 3



Step 4



Step 5

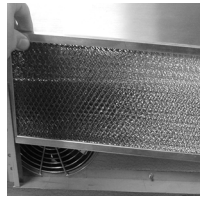

Step 6



Step 7

Step 1: Cool the Oven

⚠ **WARNING:** The oven operates at approximately 500°F (260°C) and may cause injury if not allowed to cool properly.

- Turn off the oven by pressing the On/Off key.
- Slightly open the oven door.
- Cooling takes approximately 30 minutes.

⊘ DO NOT proceed to Step 2 until the oven displays “ready to clean.”

Step 2: Clean the Baking Stone

- Remove the baking stone and GENTLY dry-scrub with a nylon scrub pad to remove food particles.

⚠ **WARNING:** Scrubbing too vigorously can cause the baking stone to crack and break.

⊘ DO NOT immerse the baking stone in water. If it is immersed by accident, allow it time to thoroughly air-dry before using; otherwise it may crack.

Step 3: Clean the Wire Rack

- The wire rack is held in place by tabs that are positioned underneath either side of the jetplate.

- Lift the rear of the wire rack.
- Pull the wire rack forward until the tabs are free.
- Wash, rinse, sanitize, and dry the wire rack.

Step 4: Clean the Jetplate

- Lift the front of the jetplate.
- Pull the jetplate forward and remove it from the oven.

⚠ **CAUTION:** Handle the jetplate with care to avoid chipping the porcelain coating.

- Wash, rinse, sanitize, and dry the jetplate.
- ⊘ DO NOT clean the jetplate with a wire brush.

Step 5: Clean the Cavity Filter (if present)

The filter must remain in place during oven operation, and it must be cleaned regularly or replaced if damaged.

- Remove the cavity filter from the back cavity wall by lifting the tab and pulling the filter towards you.
- Rinse the filter with hot water.
- Allow the filter to dry completely.

⊘ DO NOT scrub or pull apart the mesh in the filter frame.

Step 6: Clean the Air Filter

The filter must remain in place during oven operation, and it must be cleaned regularly or replaced if damaged.


- Remove the air filter from the back of the oven.
- Rinse the air filter with hot water.
- Allow the air filter to dry completely.

Step 7: Remove Large Food Particles

- The heating element can be lifted for cleaning underneath.
- ⊘ DO NOT attempt to clean the heating element.
- Use a food vacuum or disposable sani-wipe to remove large particles from the oven cavity.

Supplies and Equipment

TurboChef® Oven Cleaner (Product Number: 103180), TurboChef® Oven Guard (Product Number: 103181), Kay ClickSan® sanitizer, nylon scrub pad, clean damp and dry towels, disposable gloves, protective eyewear, dust mask (optional)

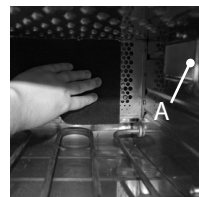

Step 8




Step 9



Step 10



Step 11

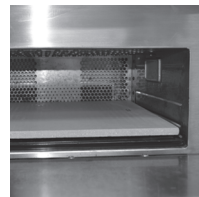

Step 12



Step 13

Step 8: Clean the Oven Cavity

- ⊘ DO NOT spray Oven Cleaner into the holes in the oven cavity.
- Apply Oven Cleaner to a disposable sani-wipe or nylon scrub pad and clean the top, sides, and bottom of the cavity.
- ⊘ DO NOT apply excessive pressure to the waveguide covers (A), located on each side of the cavity.
- For stubborn stains, sparingly spray Oven Cleaner on the stain.
- Allow the Oven Cleaner to penetrate the stain for five minutes, then wipe clean.
- ⊘ DO NOT use a hose or water jet for cleaning.

Step 9: Wipe Down the Oven Cavity

- Wipe down the oven cavity with a disposable sani-wipe.
- Dry the oven cavity with a disposable sani-wipe.

Step 10: Clean and Dry the Oven Door

- Clean the oven door with Oven Cleaner and a nylon scrub pad.
- Wipe the oven door with a disposable sani-wipe.
- Dry the oven door with a disposable sani-wipe.

Step 11: Apply Oven Guard

- Spray Oven Guard onto a disposable sani-wipe.
- Wipe the cavity walls and the inside of the oven door.
- ⊘ DO NOT spray Oven Guard into the oven or apply to the heating element.

Step 12: Reinstall Components

- Reinstall the cavity filter (if present). Be sure to align the top-left post on the back of the filter with the top-left hole on the back cavity wall. This will ensure the other posts on the back of the filter fit into the wall.
- Reinstall the jetplate, wire rack, and baking stone.
- ⊘ DO NOT operate the oven without the bottom jetplate installed. Oven damage may occur.
- Close the oven door.
- Reinstall the filter, or replace it with a new one if the mesh is deteriorated, has large openings, or has started to dislodge from the frame.

Step 13: Clean the Oven Exterior

- Wipe the oven exterior with a disposable sani-wipe.
- Remove the panel beneath the door, remove any large food particles from the panel, and wipe it with a disposable sani-wipe.
- Reinstall the panel beneath the door.
- ⊘ DO NOT spray chemicals into any openings, such as the louvers on the side panels or the rear vent catalyst housing.
- The oven is ready to turn on.

Quarterly Cleaning for the Encore™ /Encore 2™ Oven


To ensure optimal oven performance, complete the following cleaning steps once per quarter or more frequently as required.

Supplies and Equipment

Required: Phillips screwdriver, clean towels, rubber gloves for handling catalytic converter

Recommended: dust mask, vacuum, bristle or paint brush

Cleaning Steps

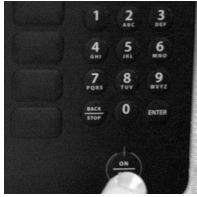

1. Complete the daily cleaning instructions (See DOC-1318-1 or the owner's manual).

⚠ CAUTION: Make sure the oven is off before proceeding.




6. The catalytic converter is accordion style and will pop out when the cover is removed. Remove the cover slowly to keep the catalytic converter in place.

⚠ CAUTION: DO NOT attempt to clean the catalytic converter or spray chemicals in this area.



2. Remove the air filter.

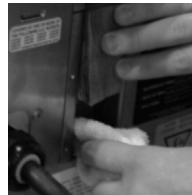

7. Clean the housing:
 - Hold the catalytic converter in place with one hand.
 - Using a clean towel, wipe out any debris that has accumulated beneath the catalytic converter.
 - Clean the outer cover and make sure the vent holes are not blocked.



3. Clean the cooling fans and finger guards.

NOTE: A bristle or paint brush and vacuum are recommended for collecting the debris.



8. Reattach the outer cover, making sure the vent holes are at the bottom.

⚠ CAUTION: Installing the outer cover upside down could result in excessive grease buildup and/or hot steam present when the oven door is opened.



4. Clean the louvers on both side panels.


NOTE: A bristle or paint brush and vacuum are recommended for collecting the debris.



9. Wipe down the back panel with a clean, damp towel.



5. Using a Phillips screwdriver, remove the screws from the rear vent catalyst housing. Support the cover with your hand.

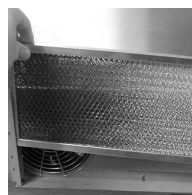

10. Reinstall the air filter. The oven is ready to turn on.