Maintenance for the High h Batch 2[™] Oven

The Daily and Deep Cleaning procedures below will help in maintaining the High h Batch 2 oven. Be sure to use only TurboChef Oven Cleaner. Using any other cleaner can damage critical parts and may void warranty on those parts. To order TurboChef Oven Cleaner, Oven Guard, or a new filter, call 800.90TURBO, +1.214.379.6000, or your Authorized Distributor.

Supplies and Equipment: TurboChef Oven Cleaner (P/N: 103180), TurboChef Oven Guard (P/N: 103181), nylon scrub pad, cleaning towel, soft-bristle cleaning brush, Phillips screwdriver (only if required for top jetplate removal)

DAILY CLEANING



 
Step 1: Prepare the Oven. □ Ensure the oven is turned off – press the ON/OFF key. □ DO NOT attempt to clean the

DO NOT attempt to clean the oven until the display reads
 "Ready to Clean."



WARNING: Injury can occur if the oven is not allowed to cool properly before cleaning.





 Grasp the filter latch and lift and pull out until the filter and bracket lie flat (Figure 3).
 Remove the filter from the bracket and gently rinse it.



CAUTION: DO NOT scrub the filter or use a water jet when cleaning.

□ If required, replace the filter (HHB-8287) if it has large holes or is becoming detached from the frame.

Step 4: Clean the Oven Door and Cook Chamber.

- Using a damp towel, remove food particles.
- For stubborn stains, spray Oven Cleaner and allow it to penetrate for 5 minutes.
 Scrub with a nylon scrub pad.
- Scrub with a hylon scrub pad.
 Wipe the oven door and cook chamber with a clean damp towel.
- Using a clean dry towel, thoroughly dry the cook chamber.

Step 5: Reinstall the Grease Filter and Oven Rack.

Step 6: Apply Oven Guard□ Follow instructions on bottle.

Step 7: Wipe the Oven Exterior with a Clean Damp Towel.

CAUTION: DO NOT spray chemicals into any openings, such as the louvers on the side panels or the cooling fans on the back of the oven. Doing so can damage critical oven components, resulting in a non-warranty service call.

DEEP CLEANING

OVEN OFF

READY TO CLEAN



- press the ON/OFF key.
 □ DO NOT attempt to clean the
 - oven until the display reads "Ready to Clean."

WARNING: Possible injury can occur if the oven is not allowed to cool properly before cleaning.

Step 2: Remove the Oven Rack.

□ Wash, rinse, sanitize, and dry the oven rack.

Step 3: Clean the Oven Door.

- Using a damp towel, remove food particles.
- □ For stubborn stains, spray Oven Cleaner and allow it to penetrate for 5 minutes.
- Scrub with a nylon scrub pad.Wipe the oven door with a clean damp towel.

Step 4: Remove the Bottom Jetplate.

- Remove the left and right support rails by gently pulling the rail out, then toward the middle of the oven (Figure 4a), and then out again.
 Remove the bottom jetplate by
- Remove the bottom jetplate by gripping the thumb screw and lifting up and out (Figure 4b).
- Wash, rinse, sanitize, and dry the bottom jetplate and both support rails.

 
Step 5: Remove the Grease Filter and Bracket.

- □ Grasp the filter latch and lift and pull out until the filter and bracket lie flat (Figure 5a).
- Lift the right side of the filter bracket until you are able to remove it (Figure 5b).
 Remove the filter from the
- Remove the filter from the bracket and gently rinse it.

CAUTION: DO NOT scrub the filter or use a water jet when cleaning.

- □ Wash, rinse, sanitize, and dry the filter bracket.
- Insert the filter back into the bracket. If required, replace the filter (HHB-8287) if it has large holes or is becoming detached from the frame.





- Remove both upper support rails by pulling the peg (Figure 6a).
- Remove the upper jetplate. If additional clearance is required, remove the air diverter using a Phillips screwdriver (Figure 6b).
- Wash, rinse, sanitize, and dry the upper jetplate and both upper support rails.

Step 7: Clean the Cook Chamber.

CAUTION: DO NOT spray Oven Cleaner directly on the back oven wall. Doing so may damage critical oven components, resulting in a nonwarranty service call.

- □ Spray Oven Cleaner to break up stubborn stains and allow it to penetrate for 5 minutes.
- □ Scrub with a nylon scrub pad. □ Clean the cook chamber thor-
- □ Clean the cook chamber thoroughly with a clean damp towel.

Step 8: Dry the Cook Chamber.

 Using a clean dry towel, thoroughly dry the cook chamber.

CAUTION: DO NOT operate the oven with water, cleaner, or debris in the bottom of the cook chamber.

Step 9: Reinstall all Clean Parts.

- Reinstall in the following order:
 - 1. Air diverter (if removed)
 - 2. Upper jetplate
 - 3. Upper support rails
 - 4. Bottom jetplate
 - 5. Lower support rails
 - 6. Grease filter and bracket
 - 7. Oven rack

Step 10: Apply Oven Guard.

□ Follow instructions on the bottle.

Step 11: Clean the Cooling Fan Housing

 Using a dry soft-bristle brush, clean the rear cooling fan housing.

Step 12: Wipe the Oven Exterior with a Clean Damp Towel.

CAUTION: DO NOT spray

chem-icals into any openings, such as the louvers on the side panels or the cooling fans on the back of the oven. Doing so can damage critical oven components, resulting in a nonwarranty service call.





©2009 TurboChef Technologies, Inc. DOC-1192/Revision A/June 2009

