



CLEANING INSTRUCTIONS

SPEED PRO SELF SERVICE PODIUM



Take off the feeder basket.



Take off front cover. The fixed *Click&Clean* lugs help clean and handle the machine.



Remove the **2Services** tap. Easy to dismantle.



Pull off the peel ejectors.



Empty waste trolley.



Drain&Clean. Drain system that makes easier to clean the feeder.



Take out the inox peel bucket.



Press the lateral button to extract the steel bin. Removable in just one click.



Unscrew the securing knobs of the pressing units.



Clean parts.

Caution! For a correct cleaning process please follow the instructions below. Make sure machine is unplugged from electrical current.



Take out the cover sides. Turn the lock / extract the peel guides.



Take out the **PulpOut** system.



Extract the knife by pulling it towards you. **CAUTION!** The blade is very sharp, be careful not to cut yoursel



Take off the pressing units in pairs.

All pieces, **EXCEPT THE FRONT COVER**, can be cleaned in a dishwasher.

The juice extraction zone and the front cover should be cleaned using a moist cloth and dish washing liquid. Rinse with clean water to remove any washing liquid traces.

Citroclean is perfect to clean the parts in contact with fresh products.

To assemble the machine repeat the process in reverse and ready to work.

Zumex Group, S.A. Tel: +34 961 301 251 · Fax +34 961 301 255 · zumex@zumex.com · Zumex Service Tel: +34 960 800 999 · www.zumex.com Zumex USA & Canada Tel: 1 305 591 0061 · zumex usa@zumex.com · Zumex Service Tel: 1-877-ZUMEX-TA (1 877 986 3982)